

Wien, am 1.11.2025

Safety Instructions – CLIFF Montessori Furniture & Functional Children’s Furniture

Thank you for choosing a CLIFF Montessori furniture product.

Our furniture is designed to support children’s independence while ensuring maximum safety. Please read these instructions carefully.

1. General Safety Information

- These products are intended exclusively for private indoor use.
- Children may use the furniture only under adult supervision.
- Montessori furniture is not a toy, but a functional piece of furniture and must be used only according to its intended purpose (e.g. learning tower, stool, shelf, wardrobe).
- The product must not be misused (e.g. climbing, swinging, jumping).
- Always ensure the furniture is stable and securely positioned.
- Use only on a flat, stable and non-slip surface.

2. Assembly & Installation

- Assembly must be carried out by adults only.
- Follow the supplied assembly instructions carefully.
- Use only the original parts provided.
- Remove all packaging materials before use.
- Check all screws and connections after assembly and regularly thereafter.

 **WARNING:** Improper assembly may cause instability and risk of injury.

3. Use & Supervision

- Use only under direct adult supervision.
- Children must not climb onto furniture, pull themselves up or stand on it unless explicitly intended (e.g. learning tower).
- Never leave children unattended while using the furniture.
- Only one child at a time may use the furniture unless otherwise specified.

Spiel dich fit! CLIFF

4. Stability & Placement (Important)

- Freestanding furniture must either:
 - be securely fixed to a wall or
 - be placed firmly against another stable piece of furniture (e.g. kitchen counter or bathroom unit).
- Furniture must never be used freestanding without additional stabilization if there is a risk of tipping.
- Do not place or use furniture near windows, window sills, balcony doors or on balconies.
- Never place furniture on elevated surfaces (tables, platforms, steps).

⚠ WARNING: Risk of tipping if improperly positioned.

5. Age & Load Information

- Observe the product-specific age and weight recommendations.
- Not suitable for adults or older children unless explicitly stated.
- Overloading may lead to material damage or instability.

6. Maintenance & Care

- Regularly inspect all screws, joints and wooden parts.
- Tighten loose screws immediately.
- Clean with a damp cloth and mild detergent only.
- Do not use aggressive or abrasive cleaning agents.
- Replace damaged or worn parts immediately.
- Use only manufacturer-approved spare parts.

7. Disclaimer

The manufacturer assumes no liability for damage or injury resulting from:

- improper use
- lack of supervision
- incorrect placement
- improper assembly
- failure to follow these safety instructions.

For questions regarding safe use or assembly, please contact:

info@cliff-toys.com

