

Safety Instructions – CLIFF Climbing Frames

Thank you for choosing a CLIFF climbing frame.

Your child's safety is our highest priority. Please read the following instructions carefully and keep them for future reference.

1. General Safety Information

- The climbing frame is intended exclusively for private indoor use.
- Children may use the climbing frame only under direct adult supervision.
- The climbing frame must be placed on a flat, stable and non-slip surface.
- Ensure that no hard or sharp objects are located in the immediate surroundings.
- The climbing frame may be used only for its intended purpose (climbing, swinging, basic gymnastics).
- Regularly check all screws, fasteners and connections for tightness.

⚠ WARNING: Not suitable for children under 12 months.

⚠ WARNING: For domestic use only.

⚠ WARNING: Adult supervision required at all times.

2. Age & Weight Information

- Please observe the age recommendations and maximum load limits stated directly on the product.
- The climbing frame may only be used within these specified limits.
- Use outside the stated age or weight limits is not permitted.

3. Assembly & Installation

- Assembly must be carried out by adults only.
- Follow the supplied assembly instructions carefully.
- Use only the original parts provided.
- After assembly, check the stability of the climbing frame.
- Remove all packaging materials before use.

⚠ WARNING: Improper assembly may result in instability and risk of injury.

Spiel dich fit!

CLIFF

4. Usage Instructions

- Children should use the climbing frame barefoot or with non-slip socks.
- Do not climb, swing or hang from unsuitable parts of the structure.
- Jumping onto or deliberately tipping the climbing frame is prohibited.
- Avoid excessive load on individual elements.
- Ensure that no loose cords, straps or clothing can become caught.

⚠ WARNING: Risk of tipping. Always supervise children during use.

⚠ WARNING: Do not place on hard surfaces such as concrete or asphalt.

⚠ WARNING: Maintain a minimum distance of 1 meter from obstacles.

5. Maintenance & Care

- Clean only with a damp cloth and mild detergent.
- Do not use aggressive or abrasive cleaning agents.
- Do not store in damp environments.
- Replace damaged or worn parts immediately.
- Use only manufacturer-approved spare parts.

6. Disclaimer

The manufacturer assumes no liability for damage or injury caused by improper use, improper assembly or failure to follow these safety instructions.

For questions regarding safe use or assembly, please contact:

info@cliff-toys.com

